

Boccole pompe alta pressione

Codice	Ø int.	Ø est.	lung.	descrizione
11-21-004	17	19	15	Posteriore albero CP1
F 00N 200 545	17	19	17,5	Posteriore albero CP1H/CP3
11-21-478	17	19	19	Posteriore albero CP1H
11-21-481	20	22	20	Anteriore albero CP1
11-21-003	20	22	22	Anteriore albero CP1H
F 00N 200 547	20	22	22	Anteriore albero CP1H/CP3
11-21-477	21	23	17	
F 00N 200 546	21	23	20	Posteriore albero CP1H/CP3 (0445010320)
BB0010-CP4	22	26	22	Posteriore albero CP4
BB0011-CP4	22	26	15	Posteriore albero CP4
11-21-002	24	26	20	Distributore CP1/CP1H
BB0012-00	24	26	24	Anteriore albero CP1H (0445010320)
BB0014-CP4	25	29	25	Anteriore albero CP4 (senza rasamento)
11-21-486	25	29	26	Anteriore albero CP4 (con rasamento)
11-21-484	28	25	20	Anteriore albero DFP6
11-21-485	23	20	20	Posteriore albero DFP6
AE0287-CP4				Estrattore/inseritore boccola post. CP4
AE0273-CP3				Estrattore boccola posteriore DFP6

